 


# Programming Instructions

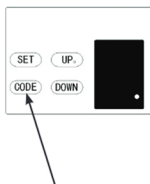


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.


1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

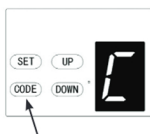

## Deleting Stored Hand Transmitters

1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.

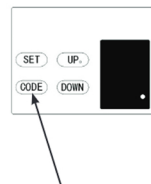


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

 
The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

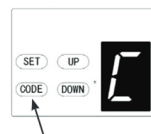

## Deleting Stored Hand Transmitters

1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.
 
# Programming Instructions

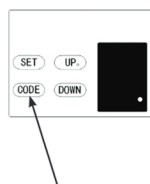


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.


1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

 The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

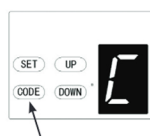

## Deleting Stored Hand Transmitters

 1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.

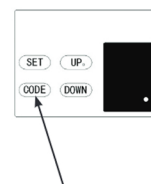


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

 
The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

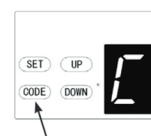

## Deleting Stored Hand Transmitters

1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.
 
# Programming Instructions

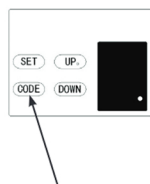


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.


1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

 The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

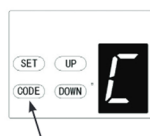

## Deleting Stored Hand Transmitters

 1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.

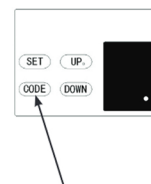


## Programming Hand Transmitters

**NOTE:** Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

 The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

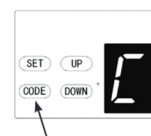

## Deleting Stored Hand Transmitters

1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.