



SETTING THE HANDSETS:

- PUSH AND HOLD THE 'P' BUTTON UNTIL THE NUMBER 7 FLASHES, THEN LET GO.
- THEN PRESS AND HOLD '+' UNTIL 7 GLOWS STRONGLY AND RELEASE
- PRESS DESIRED HANDSET BUTTON TWICE, LED 7 WILL FLASH AGAIN
- IF MORE HANDSETS TO BE PROGRAMED, PRESS AND HOLD '+' UNTILL 7 GLOWS AND PROGRAM HANDSET, REPEAT FOR ALL ADITIONAL HANDSETS
- PRESS 'P' TO END SETUP

TO DELETE HANDSET CODES

- PRESS AND HOLD THE 'P' BUTTON UNTIL THE LED 7 FLASHES
- PRESS AND HOLD THE '-' BUTTOM UNTILL LED 7 FLASHES AGAIN YHRN LRT GO
- THE CODE MEMORY HAS BEEN CLEARED AND ALL PREVIOUSLY PROGRAMED HANDSETS WILL NO LONGER OPERATE THE DOOR
- PRESS P TO EXIT.
- FOLLOW "SETTING THE HAND SET PROCEDURE" TO SET HAND SETS