


Glidermatic GRD+

Programming New or Additional Handsets

The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Glidermatic GRD+ garage door operator. Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. Please refer to your Glidermatic GTS+ Owners Manual for further information on this process.


Step 1:

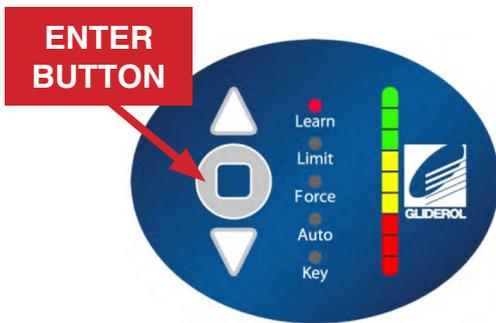

Press and hold the 'Enter' button (shown above) for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.

Note: Pressing the enter button for 5 seconds or more will erase all handset data from your operator - be careful not to press the enter key for longer than necessary.

Step 2:

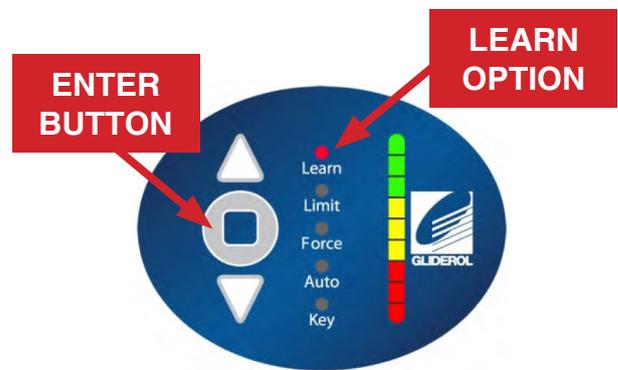

Use the arrow (Up & Down) buttons to select the 'Learn' option and press 'Enter' to confirm selection. The unit will beep three times to confirm the unit is in Learn mode.

Step 3:



Press the Main/Key 1 button on the handset. The unit will beep twice to confirm successful coding. Wait approx 3 seconds for the unit to exit setup mode.

Your handset programming is now complete!



Should you require further assistance in programming your Glidermatic GRD+ handset please contact your local Gliderol office on 1300 799 177.