


## Programming instruction for the remote-control Type SKX / EKX

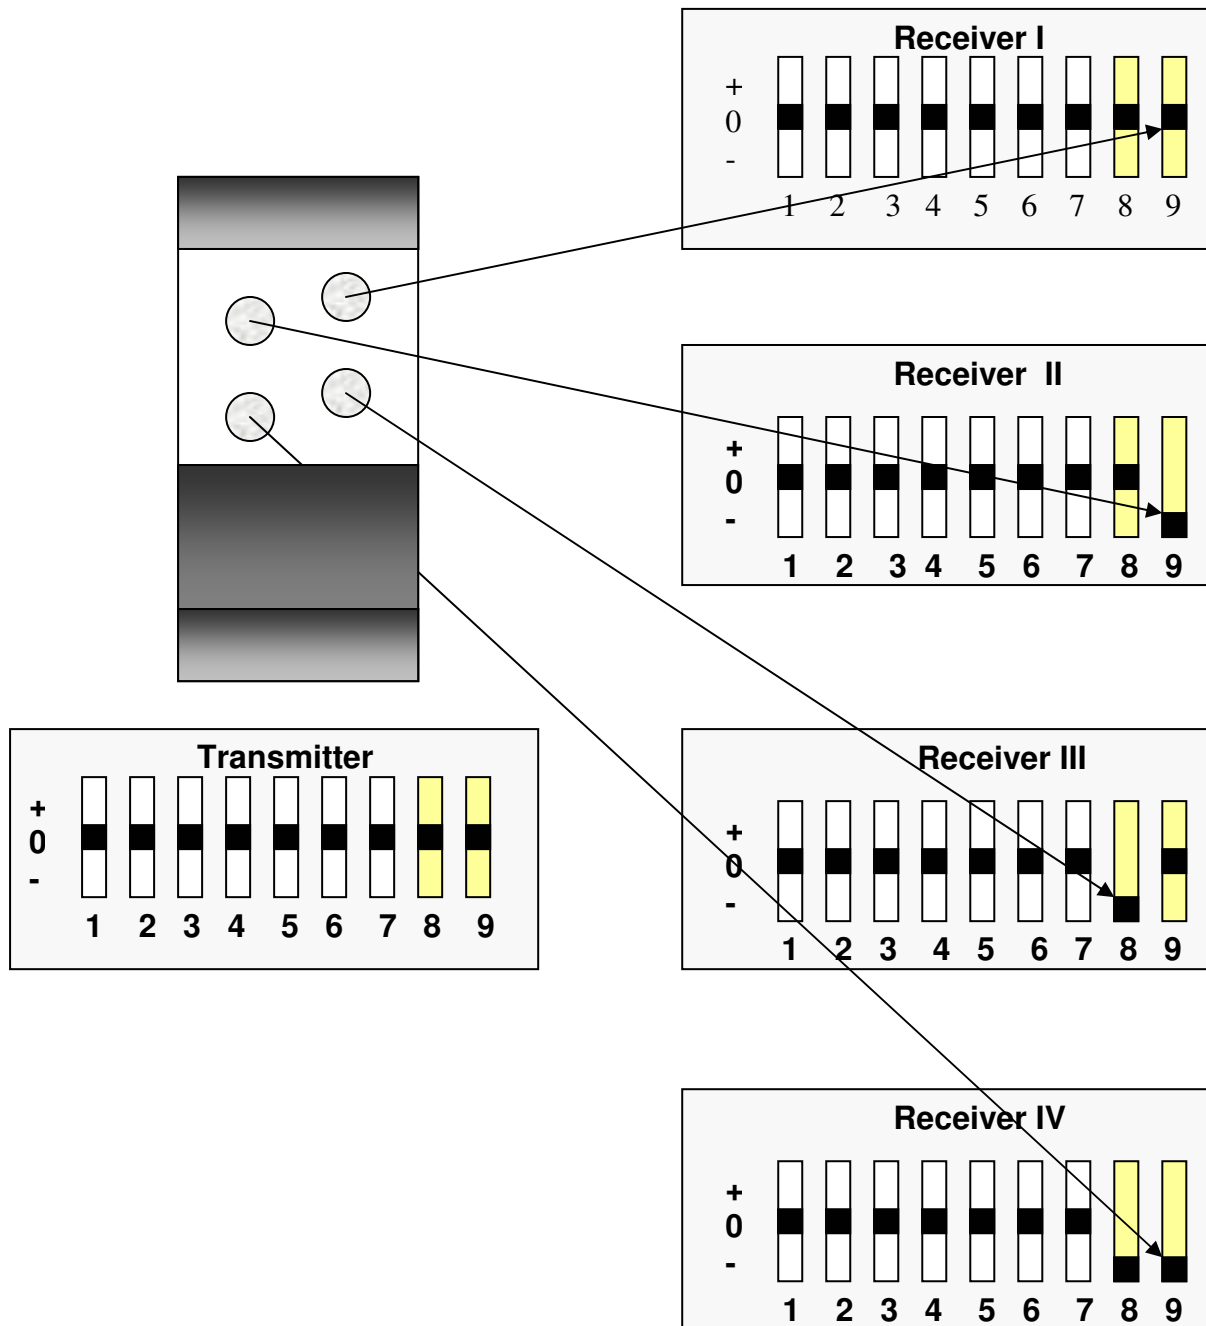

- 1.) Switches from 1 > 7 have to be programmed in the same position (all Transmitters & Receivers)
- 2.) With the switches 8 & 9 you define the channel (button on the Transmitter)