AIRKEY

REMOTE ORDERING OPTIONS





COMPATIBLE WITH









AK3XT6

AK3XT4 AKTX2-OLD AKTX4-OLD



Serial must start with N NOT compatible with P version

RECEIVER COMPATIBILITY

• Suits Models: AIRKEY Garage Door Opener D7 - P34

Remote Programming Steps

Program Remote to Receiver

- 1. Press and hold the ADD button on the receiver (garage door motor.) The Red LED will light up.
- **2.** Press any button on the new remote to be added. The Red LED will blink to indicate a successful program.

Program Existing Remote to New Remote

1. While within the operational range of the receiver (garage door motor), simultaneously press buttons 1 and 2 of an existing remote, then press any button on the new remote within 2 seconds.

Delete All Remotes (Clear Lost Remotes)

1. Press and hold the CLR button on the receiver for about 5 seconds. The Red LED on the receiver (garage door motor) will light up to indicate that all memory has been cleared.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.